



Hogans Pocket Landfill Bookings and Entry Requirements

The intent of this document is to:

- Provide information on vehicle specifications and on-line bookings for disposal at Hogans Pocket Landfill
- Provide information on requirements for access into the Hogans Pocket Landfill site
- Provide information on the communication protocols at Hogans Pocket Landfill



Vehicle Specifications and On-line Bookings

1. Vehicle Specifications

- All heavy vehicles (4.5 GVM or more) and ANY vehicle transporting waste must first be registered and recorded in Council's Waste Management System before entering the site
- A 'Vehicle Specifications Template' must be completed and submitted to Council via email at waste.services@mackay.qld.gov.au and ashlee.smith@mackay.qld.gov.au
- Once confirmation of vehicle registration is confirmed, waste disposal bookings can be made via the on-line portal
- **Please Note:** if you arrive on site and the heavy vehicle is not registered, the vehicle will be turned away and refused entry.

2. Bookings

PLEASE NOTE:

It is a requirement that ALL vehicles accessing Hogans Pocket Landfill have and use a 5-watt UHF radio onsite.

All vehicles entering and leaving the site must call in where directed (roadside signage) on Channel 12.

If a customer does not have a working UHF radio, entry to the site is prohibited, doing so may result in their account being closed.

- Refer to Hogans Pocket Landfill Bookings Instructions to complete on-line bookings.



Site Access and Communication Procedures

1. Site Entry Requirements	
All vehicles entering the site must have a UHF two-way radio minimum 5-watt output.	
2. Upon Arrival at Front Gate	
Upon arrival at the site, stop at the entry off Peak Downs Highway and read the 'Conditions of Entry' signage	
	
- Set UHF Radio to Channel 12 - Announce arrival and make 'Positive Communication' with the Weighbridge (e.g. truck inbound from Highway, can I get a radio check please weighbridge) - The caller must advise: - COMPANY NAME - TYPE OF VEHICLE (e.g. light vehicle, truck, tipper or truck and dog etc) - No driver may proceed until the site operator/weighbridge acknowledges the radio check and advises the call is loud and clear.	
3. Proceed into Site	
- Once communication is confirmed proceed into site - There are several call points both inbound (and outbound) at site that the driver must make: - The driver/caller must advise: - DIRECTION OF TRAVEL (inbound or outbound) - LOCATION (call point e.g. Black Tank) - The majority of these are signed. When at the sign call vehicle type, inbound (or outbound), and the location e.g. truck and dog, inbound, 'Powerlines' - The driver will then need to call in when proceeding onto and off the Weighbridge.	



4. Traffic Management Rules	
• Radio at each call point both inbound and outbound • The Causeway is single lane traffic only. Outbound traffic MUST give way to inbound traffic • If an outbound vehicle is approaching the causeway and hears a call from an inbound vehicle also approaching the causeway the outbound vehicle must: ○ Stop at the give way sign before the entry to the causeway and; ○ Call the inbound vehicle, advise they have stopped at the give way sign and that they will wait for the inbound vehicle to pass • Upon arrival at the weighbridge do not proceed until directed by weighbridge operator or site manager.	
5. Onsite Parking	
• Staff and visitors to park in designated areas as directed by site manager or weighbridge operator.	