

**MATERIALS**

**ROCK:** 150 TO 300mm NOMINAL DIAMETER, HARD, EROSION RESISTANT ROCK. SMALLER ROCK MAY BE USED IF SUITABLE LARGE ROCK IS NOT AVAILABLE.

**SANDBAGS:** GEOTEXTILE BAGS (WOVEN SYNTHETIC, OR NON-WOVEN BIODEGRADABLE) FILLED WITH CLEAN COARSE SAND, CLEAN AGGREGATE, STRAW OR COMPOST.

**INSTALLATION**

1. REFER TO APPROVED PLANS FOR LOCATION AND INSTALLATION DETAILS. IF THERE ARE QUESTIONS OR PROBLEMS WITH THE LOCATION OR METHOD OF INSTALLATION, CONTACT THE ENGINEER OR RESPONSIBLE ON-SITE OFFICER FOR ASSISTANCE.

2. PRIOR TO PLACEMENT OF THE CHECK DAMS, ENSURE THE TYPE AND SIZE OF EACH CHECK DAMS WILL NOT CAUSE A SAFETY HAZARD OR CAUSE WATER TO SPILL OUT OF THE DRAIN.

3. LOCATE THE FIRST CHECK DAM AT THE DOWNSTREAM END OF THE SECTION OF CHANNEL BEING PROTECTED. LOCATE EACH SUCCESSIVE CHECK DAM SUCH THAT THE CREST OF THE IMMEDIATE DOWNSTREAM DAM IS LEVEL WITH THE TOE OF THE CHECK DAM BEING INSTALLED.

4. ENSURE THE CHANNEL SLOPE IS NO STEEPER THAN 10:1 (H:V). OTHERWISE CONSIDER THE USE OF A SUITABLE CHANNEL LINER INSTEAD OF THE CHECK DAMS.

5. CONSTRUCT THE CHECK DAM TO THE DIMENSIONS AND PROFILE SHOWN WITHIN THE APPROVED PLAN.

6. WHERE SPECIFIED, THE CHECK DAMS SHALL BE CONSTRUCTED ON A SHEET OF GEOTEXTILE FABRIC USED AS A DOWNSTREAM SPLASH PAD.

7. EACH CHECK DAM SHALL BE EXTENDED UP THE CHANNEL BANK (WHERE PRACTICABLE) TO AN ELEVATION AT LEAST 150mm ABOVE THE CREST LEVEL OF THE DAM.

**MAINTENANCE**

1. INSPECT EACH CHECK DAM AND THE DRAINAGE CHANNEL AT LEAST WEEKLY AND AFTER RUNOFF-PRODUCING RAINFALL.

2. CORRECT ALL DAMAGE IMMEDIATELY. IF SIGNIFICANT EROSION OCCURS BETWEEN ANY OF THE CHECK DAMS, THEN CHECK THE SPACING OF DAMS AND WHERE NECESSARY INSTALL INTERMEDIATE CHECK DAMS OR A SUITABLE CHANNEL LINER.

3. CHECK FOR DISPLACEMENT OF THE CHECK DAMS

4. CHECK FOR SOIL SCOUR AROUND THE ENDS OF EACH CHECK DAM. IF SUCH EROSION IS OCCURRING, CONSIDER EXTENDING THE WIDTH OF THE CHECK DAM TO AVOID SUCH PROBLEMS.

5. IF SEVERE SOIL EROSION OCCURS EITHER UNDER OR AROUND THE CHECK DAMS, THEN SEEK EXPERT ADVICE ON AN ALTERNATIVE TREATMENT MEASURE.


**REMOVAL**

1. WHEN CONSTRUCTION WORK WITHIN THE DRAINAGE AREA ABOVE THE CHECK DAMS HAS BEEN COMPLETED, AND THE DISTURBED AREAS AND THE DRAINAGE CHANNEL ARE SUFFICIENTLY STABILISED TO RESTRAIN EROSION, ALL TEMPORARY CHECK DAMS MUST BE REMOVED.

2. REMOVE THE CHECK DAMS AND ASSOCIATED SEDIMENT AND DISPOSE OF IN A SUITABLE MANNER THAT WILL NOT CAUSE AN EROSION OR POLLUTION HAZARD.

6. REMOVE ANY SEDIMENT ACCUMULATED BY THE CHECK DAMS, UNLESS IT IS INTENDED THAT THIS SEDIMENT WILL REMAIN WITHIN THE CHANNEL.

7. DISPOSE OF COLLECTED SEDIMENT IN A SUITABLE MANNER THAT WILL NOT CAUSE AN EROSION OR POLLUTION HAZARD.

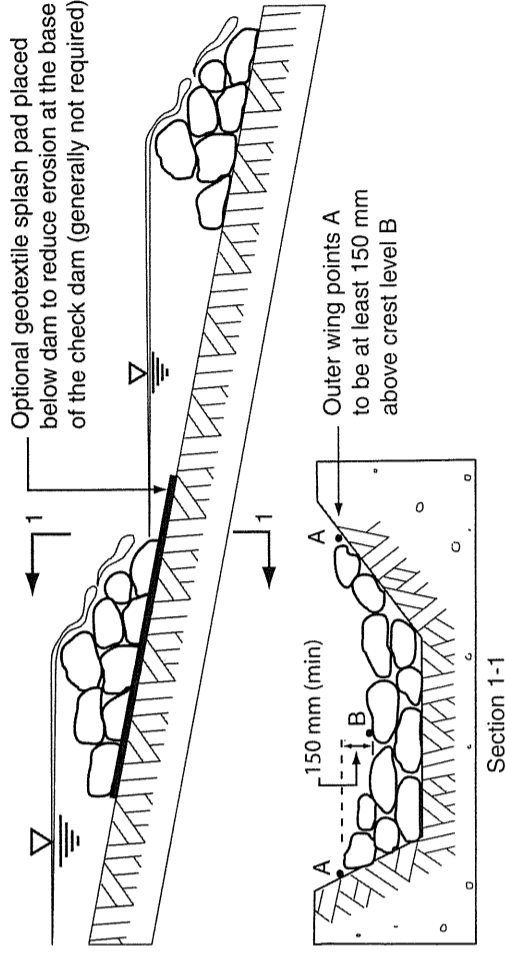

**Figure 1 - Layout and profile of check dams (rock check dams shown)**

NOTE: LIMIT USE TO 0.5 - 1.0m HIGH AND 1Ha CATCHMENT

NO.	DATE	DESCRIPTION	APPVD
A	18/11/11	ISSUE FOR CONSTRUCTION	
AMENDMENTS AND REVISIONS			
FILE NAME DESIGN\DOCUMENTS\ISESC STD DRAWINGS\...			

SURVEY	DRAWN	SIGNED	DATE
	PO6	PO6	12/2/11
SURVEY FILE NO	DESIGNED	SIGNED	DATE
	PO6	PO6	12/2/11
LEVEL DATUM	CHECKED	SIGNED	DATE
AHD			
MERIDIAN	MANAGER TECHNICAL SERVICES		
MGA 55	G. HAWES RPEQ 5693		

DIRECTOR	ENGINEERING SERVICES
S.M. HILLEY	STUART HOLLEY RPEQ 8840
DATE	DATE
13.12.11	13.12.11



**CHECK DAMS**

SHEET	1	OF	1
WORKS JOB No.			
DRAWING No.			
A3-6759			
AMEND.			
A			