

INSTALLATION

1. REFER TO APPROVED PLANS FOR LOCATION, DIMENSIONS AND CONSTRUCTION DETAILS. IF THERE ARE QUESTIONS OR PROBLEMS WITH THE LOCATION, DIMENSIONS, OR METHOD OF INSTALLATION CONTACT THE ENGINEER OR RESPONSIBLE ON-SITE OFFICER FOR ASSISTANCE.

2. WHEREVER PRACTICAL, LOCATE THE LEVEL SPREADER ON UNDISTURBED, STABLE SOIL.

3. ENSURE FLOW DISCHARGING FROM THE LEVEL SPREADER WILL DISPERSE ACROSS A PROPERLY STABILISED SLOPE NOT EXCEEDING 10:1 (H:V) AND SUFFICIENTLY EVEN IN GRADE ACROSS THE SLOPE TO AVOID CONCENTRATING THE OUTFLOW.

4. THE OUTLET SILL OF THE SPREADER SHOULD BE PROTECTED WITH EROSION CONTROL MATTING TO PREVENT EROSION DURING THE ESTABLISHMENT OF VEGETATION. THE MATTING SHOULD BE A MINIMUM OF 1200mm WIDE EXTENDING AT LEAST 300mm UPSTREAM OF THE EDGE OF THE OUTLET CREST AND BURIED AT LEAST 150mm IN A VERTICAL TRENCH. THE DOWNSTREAM EDGE SHOULD BE SECURELY HELD IN PLACE WITH CLOSELY SPACED HEAVY-DUTY WIRE STAPLES AT LEAST 150mm LONG.

5. ENSURE THAT THE OUTLET SILL (CREST) IS LEVEL FOR THE SPECIFIED LENGTH.

6. IMMEDIATELY AFTER CONSTRUCTION, TURF, OR SEED AND MULCH WHERE APPROPRIATE, THE LEVEL SPREADER.

MAINTENANCE

1. INSPECT THE LEVEL SPREADER AFTER EVERY RAINFALL EVENT UNTIL VEGETATION IS ESTABLISHED.

2. AFTER ESTABLISHMENT OF VEGETATION OVER THE LEVEL SPREADER, INSPECTIONS SHOULD BE MADE ON A REGULAR BASIS AND AFTER RUNOFF-PRODUCING RAINFALL.

3. ENSURE THAT THERE IS NO SOIL EROSION AND THAT SEDIMENT DEPOSITION IS NOT CAUSING THE CONCENTRATION OF FLOW.

4. ENSURE THAT THERE IS NO SOIL EROSION OR CHANNEL DAMAGE UPSTREAM OF THE LEVEL SPREADER, OR SOIL EROSION OR VEGETATION DAMAGE DOWNSTREAM OF THE LEVEL SPREADER.

5. INVESTIGATE THE SOURCE OF ANY EXCESSIVE SEDIMENTATION.

6. MAINTAIN GRASS IN A HEALTHY CONDITION WITH NO LESS THAN 90% COVER UNLESS CURRENT WEATHER CONDITIONS REQUIRE OTHERWISE.

7. GRASS HEIGHT SHOULD BE MAINTAINED AT A MINIMUM 50mm BLADE LENGTH WITHIN THE LEVEL SPREADER AND DOWNSTREAM DISCHARGE AREA, AND A MAXIMUM BLADE LENGTH NO GREATER THAN ADJACENT GRASSES.

REMOVAL


1. TEMPORARY LEVEL SPREADERS SHOULD BE DECOMMISSIONED ONLY AFTER AN ALTERNATIVE STABLE OUTLET IS OPERATIONAL, OR WHEN THE INFLOW CHANNEL IS DECOMMISSIONED.

2. REMOVE COLLECTED SEDIMENT AND DISPOSE OF IN A SUITABLE MANNER THAT WILL NOT CAUSE AN EROSION OR POLLUTION HAZARD.


3. REMOVE AND APPROPRIATELY DISPOSE OF ANY EXPOSED GEOTEXTILE.

4. GRADE THE AREA AND SMOOTH IT OUT IN PREPARATION FOR STABILISATION.

5. STABILISE THE AREA AS SPECIFIED ON THE APPROVED PLAN.

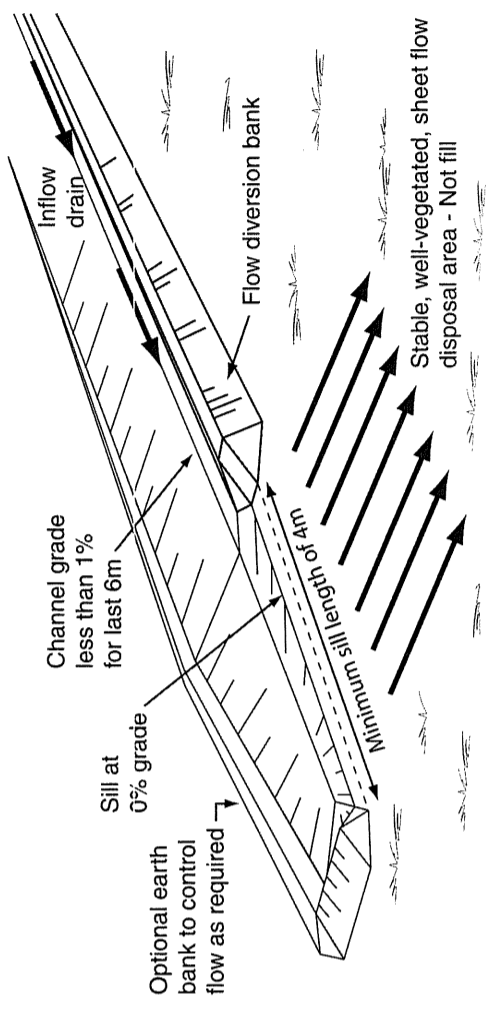

(a) Typical layout of level spreader

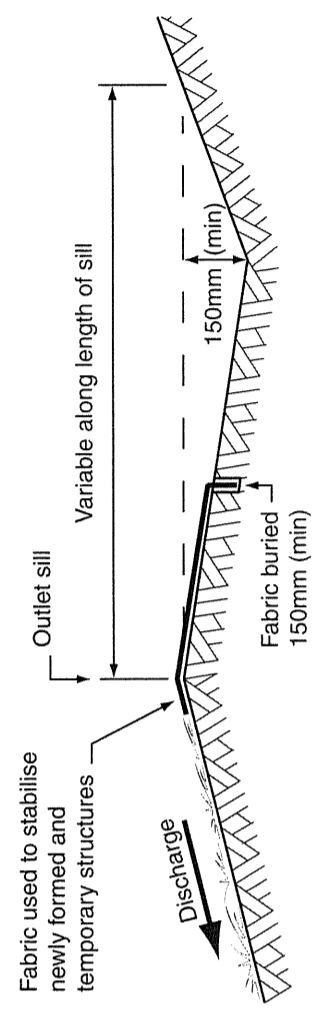

(b) Typical profile of the outlet weir

NOTE: LIMIT USE TO TYPICAL DISCHARGE OF 0.85m/s AND 0.5Ha CATCHMENT.

NO.	DATE	ISSUE FOR CONSTRUCTION	DESCRIPTION	APPVD
A	18/11/11	ISSUE FOR CONSTRUCTION	AHD	
AMENDMENTS AND REVISIONS				
FILE NAME DESIGNDOCUMENTS\BESC STD DRAWINGS...				

DRAWN	SIGNED	DATE
PDC	PDC	12/11/11
DESIGNED	SIGNED	DATE
PDC	PDC	12/11/11
CHECKED	SIGNED	DATE
MANAGER TECHNICAL SERVICES		
G. HAWES RPEQ 5693		

Mackay
REGIONAL COUNCIL

LEVEL SPREADERS

SHEET	1 OF 1
WORKS JOB No.	-
DRAWING No.	A3-6756
AMEND.	A