

**INSTALLATION**

1. REFER TO APPROVED PLANS FOR LOCATION, EXTENT, AND CONSTRUCTION DETAILS. IF THERE ARE QUESTIONS OR PROBLEMS WITH THE LOCATION, EXTENT, OR METHOD OF INSTALLATION, CONTACT THE ENGINEER OR RESPONSIBLE ON-SITE OFFICER FOR ASSISTANCE.

2. CLEAR THE LOCATION FOR THE BANK, CLEARING ONLY THE AREA THAT IS NEEDED TO PROVIDE ACCESS FOR PERSONNEL AND EQUIPMENT.

3. REMOVE ROOTS, STUMPS, AND OTHER DEBRIS AND DISPOSE OF THEM PROPERLY. DO NOT USE DEBRIS TO BUILD THE BANK.

4. FORM THE BANK FROM THE MATERIAL, AND TO THE DIMENSION SPECIFIED IN THE APPROVED PLANS.

5. IF EARTH IS USED, THEN ENSURE THE SIDES OF THE BANK ARE NO STEEPER THAN A 2:1 (H:V) SLOPE, AND THE COMPLETED BANK MUST BE AT LEAST 500mm HIGH.

6. IF FORMED FROM SANDBAGS, THEN ENSURE THE BAGS ARE TIGHTLY PACKED SUCH THAT WATER LEAKAGE THROUGH THE BAGS IS MINIMISED.

7. CHECK THE BANK ALIGNMENT TO ENSURE POSITIVE DRAINAGE IN THE DESIRED DIRECTION.

8. THE BANK SHOULD BE VEGETATED (TURFED, SEEDED AND MULCHED), OR OTHERWISE STABILISED IMMEDIATELY, UNLESS IT WILL OPERATE FOR LESS THAN 30 DAYS OR IF SIGNIFICANT RAINFALL IS NOT EXPECTED DURING THE LIFE OF THE BANK.

9. ENSURE THE EMBANKMENT DRAINS TO A STABLE OUTLET, AND DOES NOT DISCHARGE TO AN UNSTABLE FILL SLOPE.

**MAINTENANCE**

1. INSPECT FLOW DIVERSION BANKS AT LEAST WEEKLY AND AFTER RUNOFF-PRODUCING RAINFALL.

2. INSPECT THE BANK FOR ANY SLUMPS, WHEEL TRACK DAMAGE OR LOSS OF FREEBOARD. MAKE REPAIRS AS NECESSARY.

3. CHECK THAT FILL MATERIAL OR SEDIMENT HAS NOT PARTIALLY BLOCKED THE DRAINAGE PATH UP-SLOPE OF THE EMBANKMENT. WHERE NECESSARY, REMOVE ANY DEPOSITED MATERIAL TO ALLOW FREE DRAINAGE.

4. DISPOSE OF ANY COLLECTED SEDIMENT OR FILL IN A MANNER THAT WILL NOT CREATE AN EROSION OR POLLUTION HAZARD.

5. REPAIR ANY PLACES IN THE BANK THAT ARE WEAKENED OR IN RISK OF FAILURE.


**REMOVAL**

1. WHEN THE SOIL DISTURBANCE ABOVE THE BANK IS FINISHED AND THE AREA IS STABILISED, THE FLOW DIVERSION BANK SHOULD BE REMOVED, UNLESS IT IS TO REMAIN AS A PERMANENT DRAINAGE FEATURE.

2. DISPOSE OF ANY SEDIMENT OR EARTH IN A MANNER THAT WILL NOT CREATE AN EROSION OR POLLUTION HAZARD.

3. GRADE THE AREA AND SMOOTH IT OUT IN PREPARATION FOR STABILISATION.

4. STABILISE THE AREA BY GRASSING OR AS SPECIFIED IN THE APPROVED PLAN.

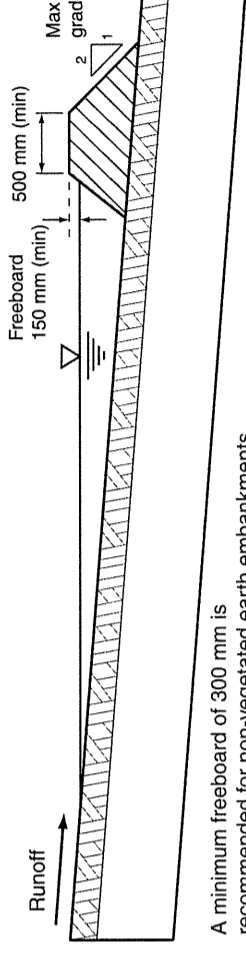

**Figure 1 - Typical profile of flow diversion bank formed from earth**

**Table 1 - Recommended dimensions of flow diversion banks**

Parameter	Earth banks	Vegetated banks	Compost berms	Sandbag berms
Height (min)	500 mm	500 mm	300 mm	N/A
Top width (min)	500 mm	500 mm	100 mm	N/A
Base width (min)	2500 mm	2500 mm	600 mm	N/A
Side slope (max)	2:1 (H:V)	2:1 (H:V)	1:1 (H:V)	N/A
Freeboard	300 mm	150 mm	100 mm	50 mm

NOTE: LIMIT USE TO 0.7Ha CATCHMENT AND TYPICALLY 0.5% GRADIENT.

<b>FLOW DIVERSION BANKS</b>		SHEET 1 OF 1
		WORKS JOB No. -
<b>Mackay</b> REGIONAL COUNCIL		DRAWING No. AMEND. A
	DIRECTOR ENGINEERING SERVICES <i>S. M. Holley</i> STUART HOLLEY RPEQ 8390	DATE 13.12.11
	SIGNED <i>POG</i>	DATE 12/12/11
	SIGNED <i>POG</i>	DATE
	SIGNED	DATE
	DRAWN <i>POG</i>	
	DESIGNED <i>POG</i>	
	CHECKED	
	MANAGER TECHNICAL SERVICES <i>G. Hawes</i>	
	G. HAWES RPEQ 5693	
	SURVEY	
	SURVEY FILE No	
	LEVEL DATUM	
	MERIDIAN	
	MGA 55	
	APPVD	
	DESCRIPTION	
	AMENDMENTS AND REVISIONS	
	DESIGN DOCUMENTS/SEC STD DRAWINGS...	